


SUMMER JOCKEY PUMP VALVE ALIGNMENT

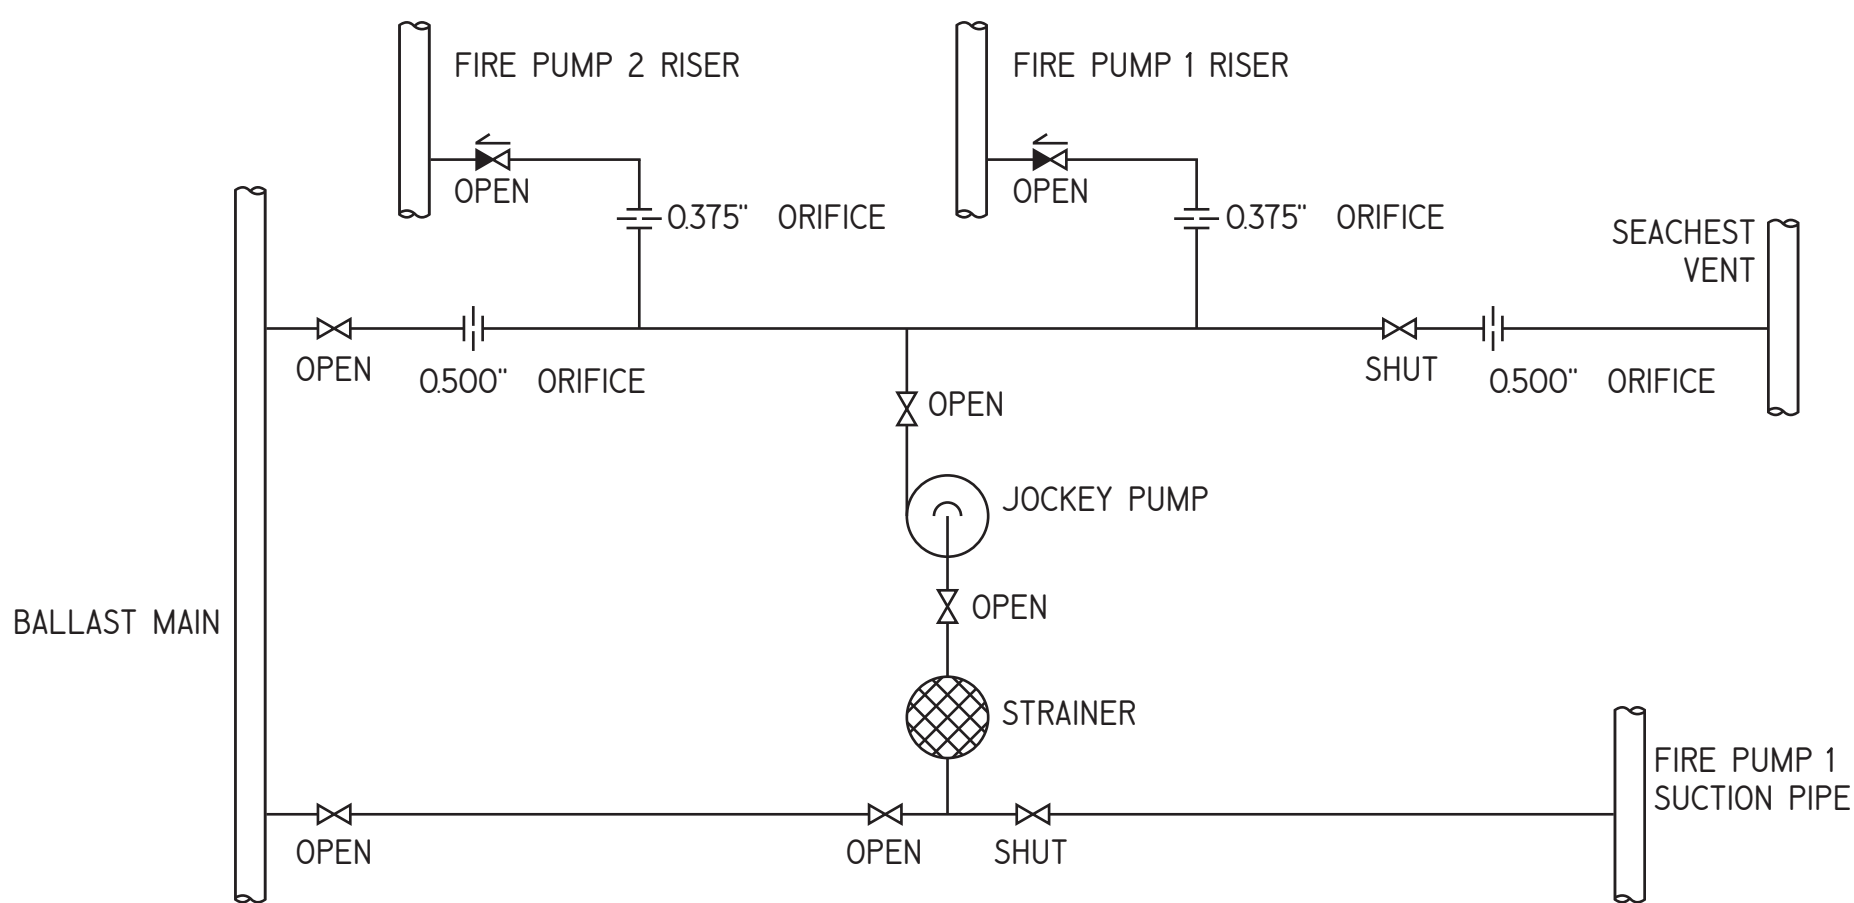

WINTER JOCKEY PUMP VALVE ALIGNMENT

FIREMAIN JOCKEY PUMP INSTRUCTION PLACARD

1. ALIGN VALVES AS SHOWN FOR SUMMER MODE WHEN OPERATING IN ICE FREE WATERS.
2. ALIGN VALVES AS SHOWN FOR WINTER MODE WHEN OPERATING IN ICE.
3. CLEAN STRAINER WHEN PUMP SUCTION GAUGE READINGS DROPS TO 10 INCHES HG.